

BFL-2(1/1)
Installation Guide

REF#: S-60000-V1.3
October 2026

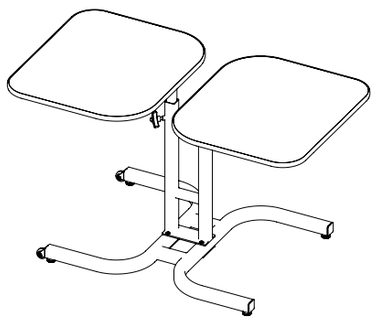

#	PART #	PART DESCRIPTION	QTY
1	BFL2-1151	Table Base	1
2	BFL2-1156	Center Post	1
3	BFL2-1158	2 1/4“ Socket Head Screws	4
4	BFL2-1160	Base Plates (Threaded)	2
5	BFL4-4164	Spring Loaded Pistons	2
6	BFL4-4165	Table Arms	2
7	BFL4-4167	1 1/4” Bolts (Pre-installed)	4
8	BFL4-4168	1/4” Nuts	4
9	BFL2-1168	Table Tops	2
10	BFL4-4174	Table Top Mounting Bracket	2
11	BFL4-4175	3/4” Philips Bolt (M6x16)	16
12	BFL4-4166	Adjustable Knobs	4
13	BFL4-4177	Adjustable Glides (Pre-installed)	4
14	BFL4-4178	Transport Castor (Pre-installed)	2

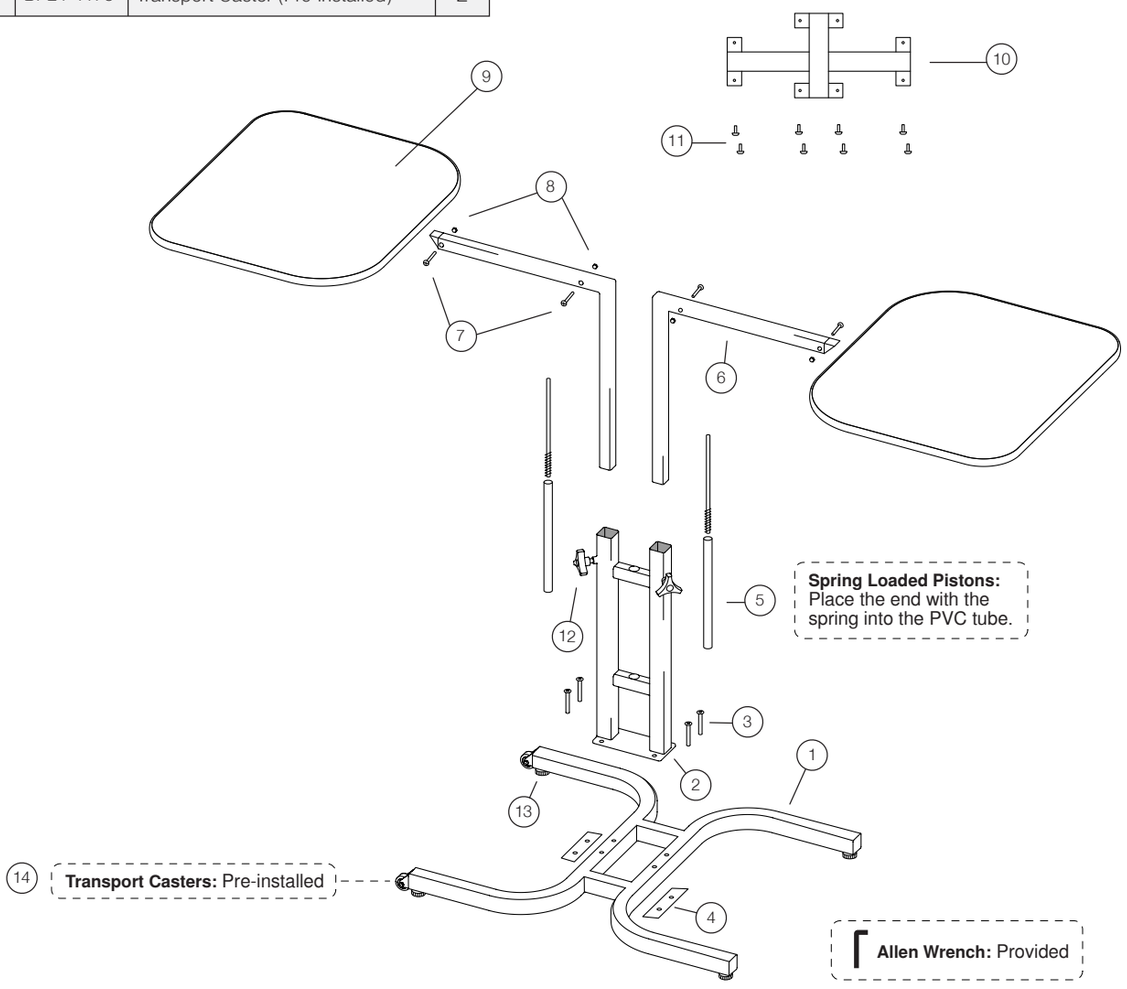

TOOLS REQUIRED
ESTIMATED TIME OF INSTALLATION: 20 MINS

PHILIPS SCREW DRIVER

10MM WRENCH / SOCKET (Optional)

13MM WRENCH / SOCKET (Optional)

PLEASE DO A COUNT BEFORE STARTING. IF YOU NEED TO ORDER PARTS, PLEASE CONTACT TECHNICAL SUPPORT AT 1-888-678-2060.

STEP 1 BASE ASSEMBLY

Required Items:
Table Base (#1)
Center Post (#2)
2 1/4" Socket Head Screws (#3) **X4**
Base Plate (Threaded) (#4) **X2**
Spring Loaded Pistons (#5) **X2**

- Place Center Post (#2) on Table Base (#1). Insert 2 1/4" Socket Head Screws (#3) through Center Post (#2) and Base (#1) into the Threaded Base Plate (#4) underneath the Table Base (#1) and tighten using the allen wrench provided - See Diagram A.
- Insert Spring Loaded Pistons(#5) into Center Post (#2) - See Diagram B.

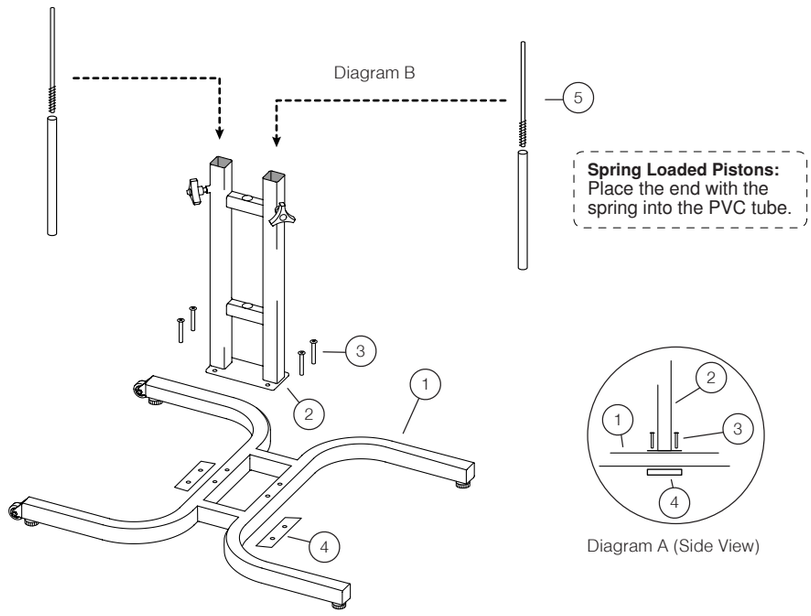



Diagram A (Side View)

STEP 2 TABLE TOP MOUNTING BRACKET ASSEMBLY


Required Items:
Table Tops (#9) **X2**
Table Top Mounting Brackets (#10) **X2**
3/4" Philips Bolt (#11) **X16**
Philips Screw Driver

- Lay Table Top (#9) on a level floor with pre-drilled holes pointing up. Using the Philips Screw Driver, secure Table Top Mounting Bracket (#10) using the 3/4" Philips Bolt (#11). Repeat on all Table Tops (#9).

  Do not tighten at this time.

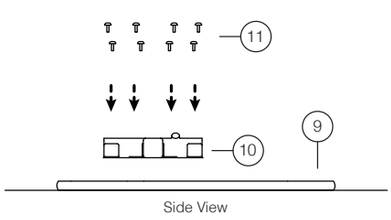


Side View

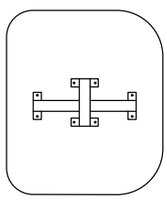


STEP 3 TABLE TOP ASSEMBLY

Required Items:
Table Arms (#6) **X2**
1 1/4" Bolts (#7) **X4**
1/4" Nuts (#8) **X4**
Table Tops (#9) **X2**


- Insert Table Arms (#6) into the assembled base. Ensure the "L" shaped inner bracket is held to one side while inserting the Table Arms (#6) into the assembled base.
- Unbolt outer 1 1/2" Hex Bolt (#7) and 1/4" Nut (#8) from Table Arm (#6). Insert Table Top (#9). Secure with 1 1/2" Hex Bolt (#7) and 1/4" Nut (#8). Repeat on both Table Arms - **See Diagram B**.
- Use Adjustable Knobs (#12) to secure tops.

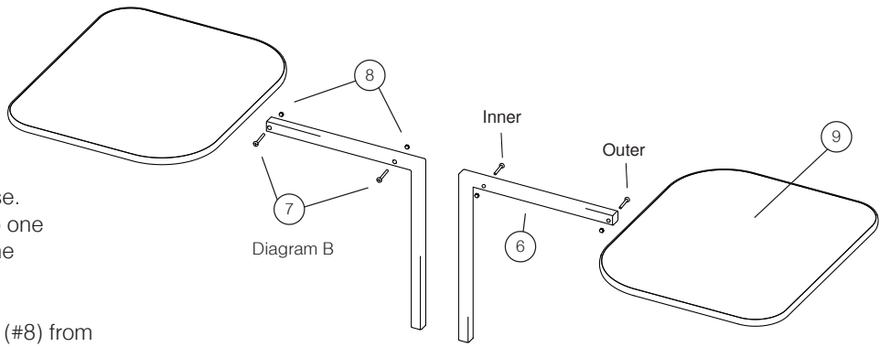

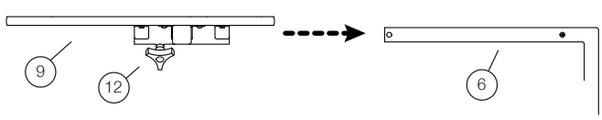

STEP 4 FINAL ADJUSTMENTS / OPERATIONS

- Use Adjustment Knobs (#12) to secure the table tops at the desired height.
- Operation: Two offset casters have been provided to ensure easy & safe relocation of the table. To move the table, lift the top opposite side of the casters by 10" off the floor. Adjust glides to level & stabilize the table. Secure by tighten the locking nut.

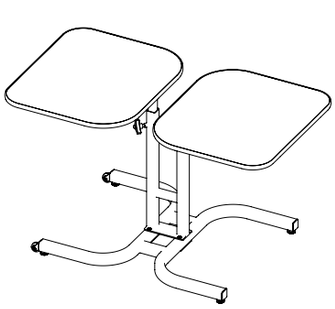

BFL-2(1/1) SPECIFICATIONS

OVERALL: 48" X 26" (EXTENDED - 60" X 26")
INDIVIDUAL TOP: 26"W X 22"D
HEIGHT ADJUSTMENT: 26" - 36"
20" - 30" - **OPTIONAL**

ADDITIONAL MODELS:


BFL-4(2/2)


BFL-4(4/1)